


## 1-4. Opening and closing the windows and moon roof

### Power windows

The power windows can be opened and closed using the following switches.

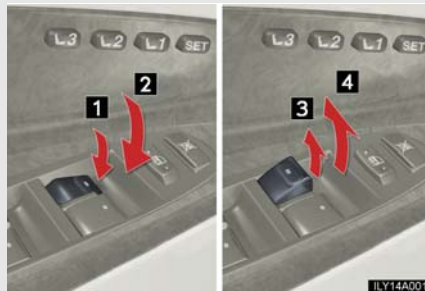

- 1 Opening
- 2 One-touch opening\*
- 3 Closing
- 4 One-touch closing\*

\*:Pushing the switch in the opposite direction will stop window travel partway.

1

Before driving

### Lock switch



Press the switch down to lock passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

## 1-4. Opening and closing the windows and moon roof

---

### n **The power windows can be operated when**

The engine switch is in "IG-ON" mode.

### n **Linked door lock window operation**

l The power windows can be opened and closed using the mechanical key.  
(→P. 486)

l The power windows can be opened using the wireless remote control. (→P. 14)

### n **Operating the power windows after turning the engine switch "OFF"**

The power windows can be operated for approximately 45 seconds even after the engine switch is switched to "ACC" mode or turned "OFF". They cannot, however, be operated once the driver's or front passenger's door is opened.

### n **Jam protection function**

If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.

### n **When the battery is disconnected**

The power windows must be initialized in order to ensure proper operation.  
(Perform for each window with the switch for each seat.)

**STEP 1** Open the window halfway.

**STEP 2** Fully close the window by pulling the switch up and continue holding the switch for 1 second.

The indicator on the switch changes from a flashing pattern to being on when initial settings are complete.

### n **Customization**

Settings (e.g. linked door lock operation) can be changed. (→P. 525)

## 1-4. Opening and closing the windows and moon roof

### CAUTION

#### **n When closing the windows**

Observe the following precautions.  
Failing to do so may result in death or serious injury.

- 1** Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- 1** Do not allow children to operate the power windows.  
Closing a power window on someone can cause death or serious injury.

#### **n Jam protection function**

- 1** Never try jamming any part of your body to activate the jam protection function intentionally.
- 1** The jam protection function may not work if something gets caught just before the window fully closes.


1

Before driving

## 1-4. Opening and closing the windows and moon roof Moon roof (if equipped)

Use the overhead switches to open, close, and tilt the moon roof up and down.

### n Opening and closing

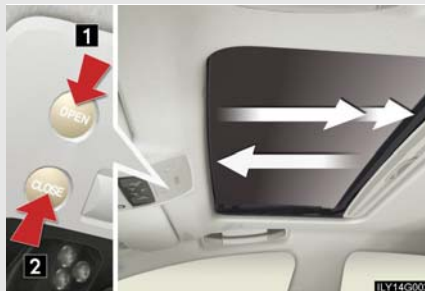

#### 1 Open

Stops just before it is opened fully. Press the switch again to fully open.

#### 2 Close

To stop partway, press the switch lightly.

### n Tilt up and down



#### 1 Tilt up

#### 2 Tilt down

To stop partway, press the switch lightly.

## 1-4. Opening and closing the windows and moon roof

### n **The moon roof can be operated when**

The engine switch is in "IG-ON" mode.

### n **Linked door lock moon roof operation**

l The moon roof can be opened and closed using the mechanical key. (→P. 486)

l The moon roof can be opened using the wireless remote control. (→P. 14)

### n **Operating the moon roof after turning the engine switch "OFF"**

The moon roof can be operated for approximately 45 seconds even after the engine switch is switched to "ACC" mode or turned "OFF". It cannot, however, be operated once the driver's door is opened.

### n **Jam protection function**

If an object is detected between the moon roof and the frame while closing or tilting down, travel is stopped and the moon roof opens slightly.

### n **If the moon roof cannot be closed automatically**

Keep the switch depressed.

### n **To reduce moon roof wind noise**

Drive with the moon roof opened automatically (just before fully opened position).

### n **Sunshade**

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

### n **Customization**

Settings (e.g. linked door lock operation) can be changed. (→P. 525)

1

Before driving

#### 1-4. Opening and closing the windows and moon roof

##### CAUTION

###### **n When opening the moon roof**

Observe the following precautions.

Failing to do so may cause death or serious injury.

**I** Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.

**I** Do not sit on top of the moon roof.

###### **n When closing the moon roof**

Observe the following precautions.

Failing to do so may result in death or serious injury.

**I** Check to make sure that all passengers do not have any part of their bodies in a position where they could be caught when the moon roof is being operated.

**I** Do not allow children to operate the moon roof.  
Closing the moon roof on someone can cause death or serious injury.

###### **n Jam protection function**

**I** Never try jamming any part of your body to activate the jam protection function intentionally.

**I** The jam protection function may not work if something gets caught just before the moon roof fully closes.